


RV Bumper-Mounted 2 Bike Rack Instructions

QPRBM2R

Ref.	Description	Qty.
A	Carrier Frames	2
B	Stabilizer Poster	1
C	6" x 3/8" U-Bolts	3
D	7" x 3/8" U-Bolt	1
E	End Cap	1
F	3/8" Washers	8
G	3/8" Nylon Lock Nuts	8

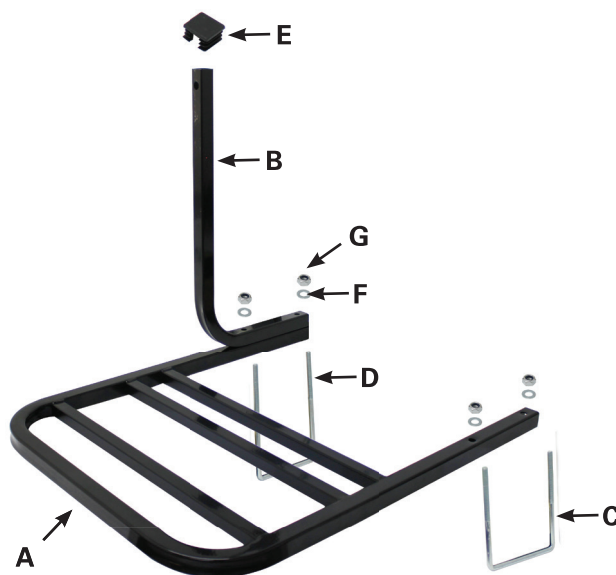

Read, Follow, and Save These Instructions.

Warnings:

- To ensure safety while traveling, bicycles must be secured to rack. Permanent vehicle fixtures, such as bumpers and tow hooks, provide the most security when fastening bicycles on the rack. Steel cables are recommended for strength and should be positioned through the bicycle frames. Should a one become dislodged, a secured bicycle will remain connected to the vehicle.
- Do not exceed manufacturer weight limit. This product is not intended for use with motorized bicycles, tandem bicycles, or heavy bicycles.
- Install only on continuous weld steel tubular bumpers. Consult vehicle manufacturer to ensure bumper strength before application.
- Periodically check all nuts to make sure they remain tight. Snug any loose nuts.
- Evenly distribute bicycle weight on rack.
- This product and its manufacturer are not liable for any wear and tear to your bicycle including scratches, damages from improperly securing bicycles or incorrect frame installation.

Warranty

Quick ProductsTM warranties this product for consumer use for 1 years after the date of retail purchase. Warranty valid only in the USA.


Quick Products warranties this product to the original retail purchaser to be free from defects in materials and workmanship, ordinary wear and tear expected. This warranty shall not apply to any defects caused by: (I) overloading, (II) physical abuse of goods or any acts of vandalism by any person, (III) improper installation or use contrary with the instructions, (IV) commercial use. The sole remedy under this warranty is at the discretion of the manufacturer: the replacement of the same or similar product, or the refund of the original purchase price. Quick ProductsTM is not responsible for any consequential or incidental damages. Any and all freight charges to handle warranty claims are the responsibility of the customer. Quick ProductsTM is not responsible for any labor charges that may be incurred.

Installation Instructions

Read all information included on page 1 before beginning operation or installation.

1. Position the left carrier frame above square bumper, aligning the bolt holes on either side of the bumper.
2. From the bottom, place small U-bolts around the bumper and up through the matching holes in the carrier frame.
3. Place a washers and nuts on the U-bolts. Do not tighten; the frame should now be able to slide along the bumper left and right.
4. Position the right carrier frame above square bumper, aligning the bolt holes on either side of the bumper.
5. From the bottom, place the remaining small U-bolt through the right side of the frame and the large U-bolt through the left side of the frame.
6. Position stabilizer post onto the top of the frame, matching the holes to the large U-bolt.
7. Place washers and nuts on each U-bolt. Do not tighten.
8. Adjust carrier frames to desired width. Bicycle tires should sit into the channels.
9. Once the desired position is achieved, tighten all nuts securing the frames to the bumper.
10. Install end cap on stabilizer post.
11. Using a rope, bungee or cable (not included), secure bikes to stabilizer post.

Figure 1

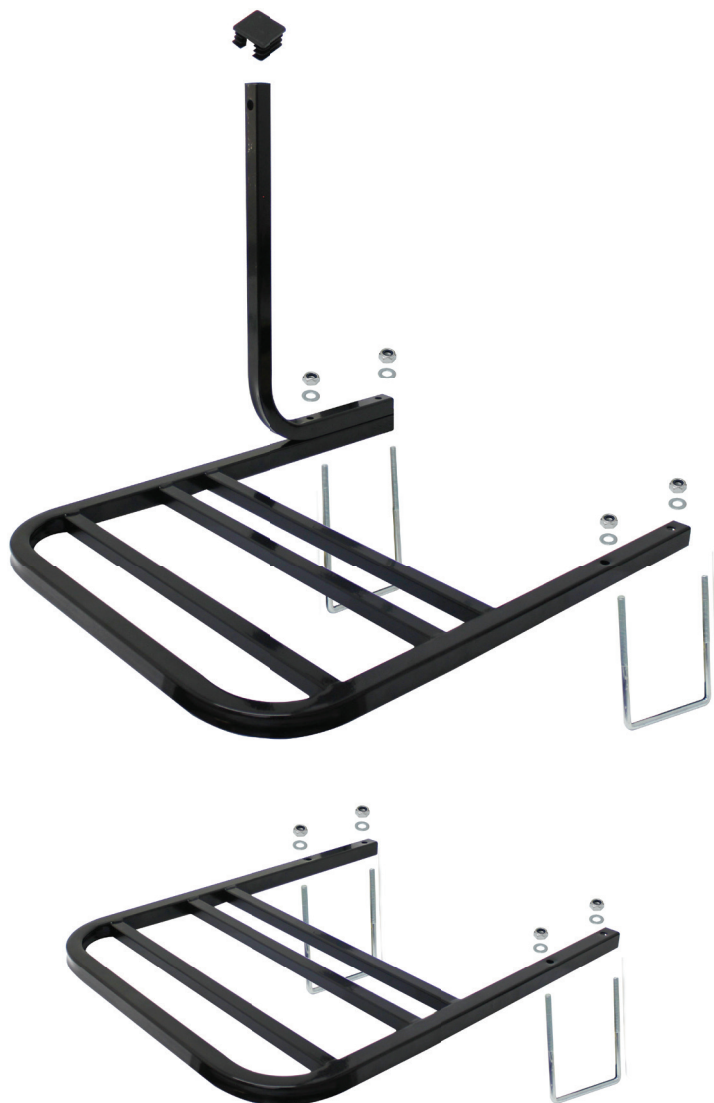

Correct



Correct




Incorrect



Référence	Description	Quantité
A	Cadres Transporteur	2
B	Stabilisateur affiche	1
C	6" x 3/8" U-Boulons	3
D	7" x 3/8" U-Boulons	1
E	Embout	1
F	3/8" Rondelles	8
G	3/8" Nylon-écrous	8

QPRBM2R

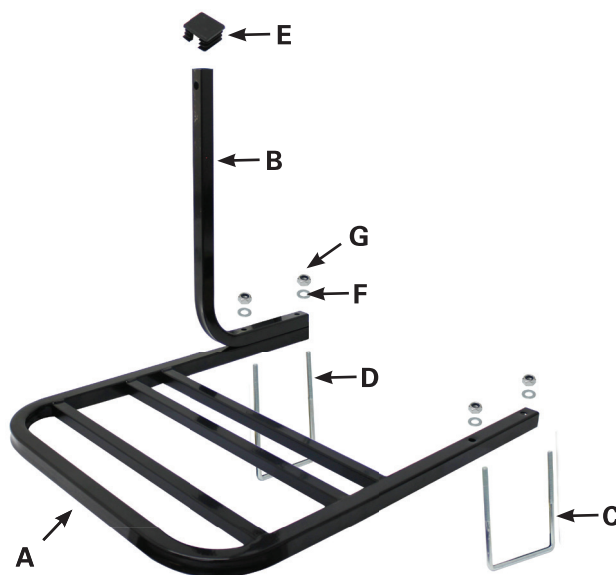

Lire, suivre, et conserver ces instructions.

Avertissements:

- Pour assurer la sécurité pendant le voyage, les bicyclettes doivent être fixés au rack. accessoires de véhicules permanents, tels que les pare-chocs et des crochets de remorquage, fournissent le plus de sécurité lors de la fixation des vélos sur le rack. Les câbles en acier sont recommandés pour la force et doivent être positionnés à travers les cadres de bicyclettes. Cas où l'une se détacher, un vélo sécurisé restera connecté au véhicule.
- Ne pas dépasser la limite de poids du fabricant. Ce produit est destiné à être utilisé avec des vélos motorisés, vélos tandem, ou des vélos lourds.
- Installez uniquement sur les pare-chocs tubulaires en acier soudé en continu. Consulter le fabricant du véhicule pour assurer pare-chocs de force avant l'application.
- Vérifiez périodiquement tous les écrous pour vous assurer qu'ils demeurent serrés. Snug des écrous desserrés.
- Répartir le poids de la bicyclette sur la grille.
- Ce produit et son fabricant ne sont pas responsables de toute usure de votre vélo, y compris les rayures, les dommages causés par les bicyclettes de fixation mal ou l'installation de trame incorrecte.

Garantie

Quick ProductsTM garantit ce produit pour une utilisation à la consommation pour 1 ans après la date d'achat. Garantie valable uniquement aux Etats-Unis.


Quick ProductsTM garantit ce produit à l'acheteur original sont exempts de défauts de matériaux et de fabrication, l'usure normale attendus. Cette garantie ne concerne pas les défauts causés par: (I) la surcharge, (II) la violence physique des marchandises ou de tout acte de vandalisme par toute personne, (III) une installation incorrecte ou contraire aux instructions, (IV) l'utilisation commerciale. Le seul recours en vertu de cette garantie est à la discrétion du fabricant: le remplacement de la même ou un produit similaire, ou le remboursement du prix d'achat initial. Quick ProductsTM est pas responsable des dommages indirects ou accessoires. Tous les frais de transport pour gérer les demandes de garantie sont à la charge du client. Quick ProductsTM est pas responsable des frais de main-d'œuvre qui peuvent être engagés.

Instructions D'installation

Read all information included on page 1 before beginning operation or installation.

1. Placez le châssis de support gauche au-dessus de pare-chocs carré, en alignant les trous de boulons de chaque côté du pare-chocs.
2. Dans le fond, placez les petits U boulons du pare-chocs et plus à travers les trous correspondants dans le châssis porteur.
3. Placez un rondelles et les écrous sur les U-boulons. Ne pas serrer; le cadre doit maintenant être en mesure de glisser le long du pare-chocs gauche et à droite.
4. Placez le cadre de support juste au-dessus de pare-chocs carré, en alignant les trous de boulons de chaque côté du pare-chocs.
5. Du fond, placez le reste petit U-boulon par le côté droit du cadre et le grand U-boulon à travers le côté gauche du cadre.
6. Position stabilisant après sur la partie supérieure du cadre, avec les trous au grand U-boulon.
7. Placez les rondelles et les écrous sur chaque U-boulon. Ne pas serrer.
8. Ajuster les cadres de support à la largeur souhaitée. Pneus vélo doivent être assis dans les canaux.
9. Une fois la position désirée est atteinte, serrer les écrous de fixation des cadres sur le pare-chocs.
10. Installez capuchon sur stabilisant après.
11. À l'aide d'une corde ou bungie (non inclus), sécurisés les vélos au poteau de stabilisant.

Figure 1

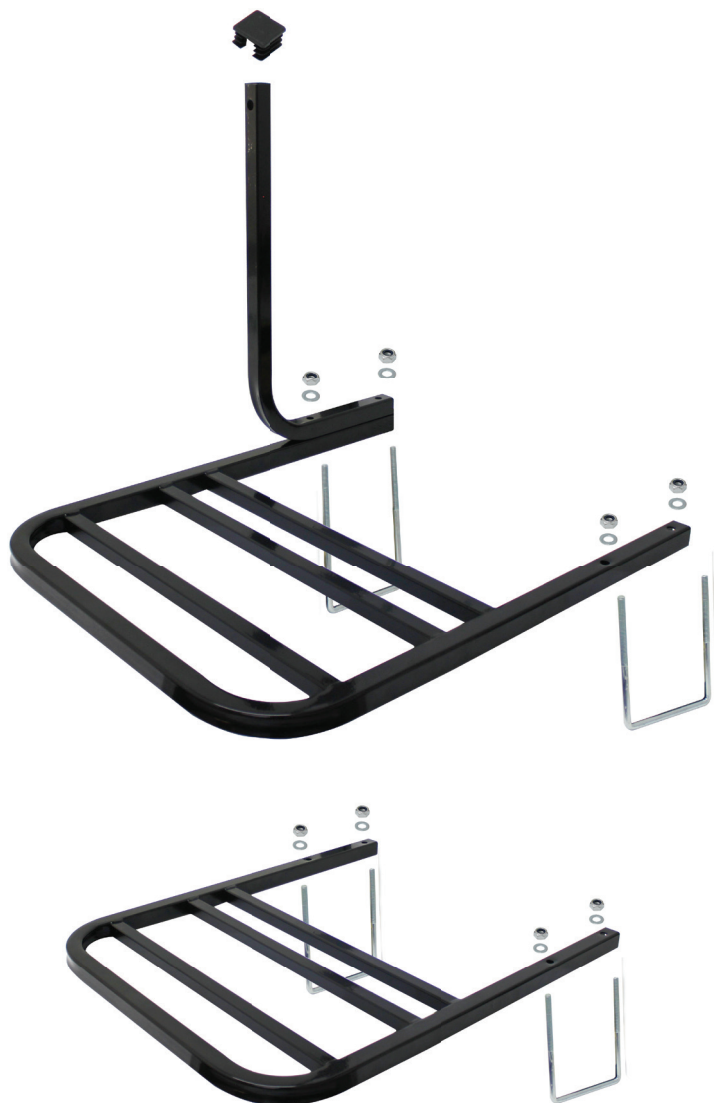

Correct



Correct



Incorrect

